

WARRANTY

The product is guaranteed for 1 year (12 months) from the date of purchase. The warranty is a repair or replacement warranty. To be entitled to a warranty claim the consumer must contact the authorised Fanco retailer (the place of purchase) in writing as soon as they are aware of the fault, and provide the following information;

- a. The original dated proof of purchase (i.e. purchase receipt) from an authorised Fanco retailer
- b. Details of the nature of the fault
- c. If possible and relevant, photographs may also be requested.

The consumer may be required to return the item to the place of purchase for testing when advised.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is valid in Australia ONLY

What is not covered by the product warranty:

The Warranty covers only defects due to manufacturing faults, and therefore does not include defects caused by misuse, transport damage, modification or alterations made to the products, incorrect installation, installation by unauthorised or unqualified personnel, water damage, damage caused by alternative power systems (for example: solar inverters etc), lack of maintenance or cleaning of the product.

The Warranty only covers products that have been installed and operated within the guidelines specified by Fanco, and within the correct operating voltage range as stated on the product's rating label. The Warranty covers only the product, no additional expenses, including but not limited to; freight costs to return a faulty item and to send out a repaired/replacement item, any costs associated with installation or removal of the original item or repaired/replacement item, any expenses incurred by the consumer in making the warranty claim.

SAFETY INSTRUCTIONS

If the supply cord is damaged on arrival it must be replaced by the manufacturer, or a similarly qualified individual. If a power cord is subsequently damaged by the client the manufacturer will not be able to replace the cord. The unit must not be used before suitable installation (see overleaf).

Do not hang anything from the guard


The pedestal fan should be placed on steady, level ground. The wall fan should be installed approximately 2.5m above the floor.

Do not insert fingers or any foreign objects into the guard. The appliance is not designed for use by persons with reduced physical, sensory or mental capabilities. Children and infants should be supervised at all times when within the same proximity as the product.

This product is designed for indoor use only


- Please ensure the fan is turned off prior to cleaning.
- Use only a soft, damp cloth to clean the fan
- Do not immerse the fan in water and do not allow water to drip into the motor housing. The product is suitable for indoor installation only.
- Do not use gasoline / paint thinner or other chemicals to clean the fan.
- To clean the fan blade use an object such as a screw driver to disengage the hooks (8 in total) holding the front of the grille to the rear.
- Carefully remove the front grille and wipe the blades clean.
- Re-assemble the grille by clicking the hooks back into place.
- Cover the fan to protect it from dust and store in a cool, dry place.

DC SEMI COMMERCIAL WALL FAN

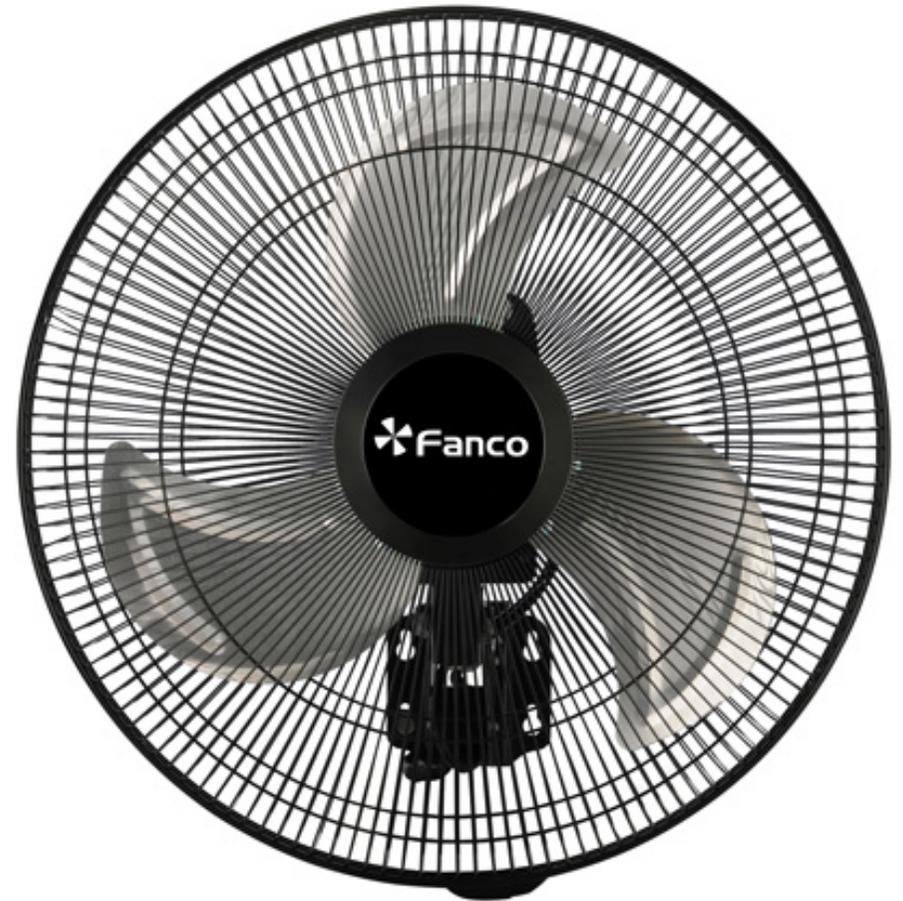


Exploded View

1. Name Plate
2. Front Guard
3. Guard Sealing ring
4. Blade
5. Rear Guard
6. Motor Shaft
7. Limit Pin
8. Motor Housing
9. Touch Switch
10. Wall Mounting Bracket

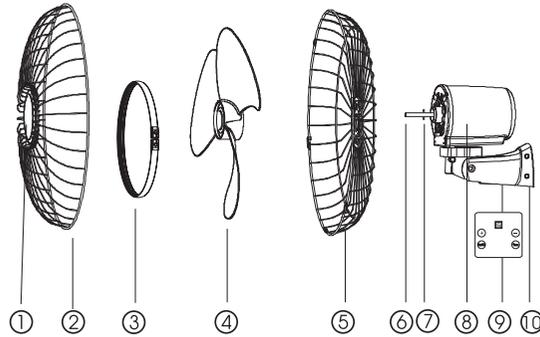


Installation Instruction


Be sure to shut off the electric supply at the main switch or circuit breaker before installation.

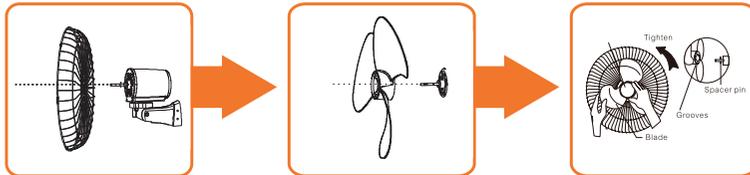

1. Loosen the Rear Guard Locking Nut from the motor housing, position the Rear Guard firmly to the motor housing and fasten tightly the Rear Guard Locking Nut.
2. Push the Blade along the Motor Shaft and fasten it firmly with the Blade Locking Nut.
3. Fit the Front Guard to the Rear Guard by clipping the Guard Securing Hook into the corresponding Guard Securing Slot.

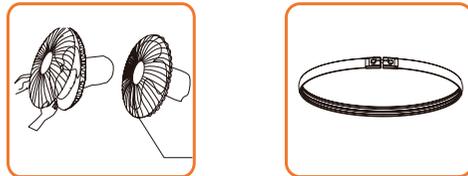


4. Fit the Guard Sealing Ring over the gap between the Front and Rear Guards. Tighten the screw to secure the ring firmly in place.

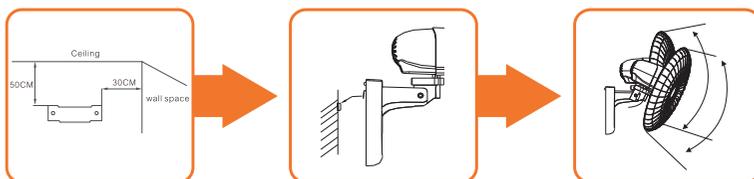


5. Mark and drill the mounting screws into the wall.
NB: The Wall Mounting Bracket must have a minimum distance of 500mm from the ceiling/roof and a 300mm distance from wall corners.
6. Attach the Wall Fan to the wall screws.
7. Adjust the fan elevation angle for best air direction by pushing the elevation tilt handle back or forth.
8. Neatly run the power cord to the power source/socket outlet. Ensure that the voltage used is **160-250 volts 50/60Hz**

Electrical Circuit Drawings

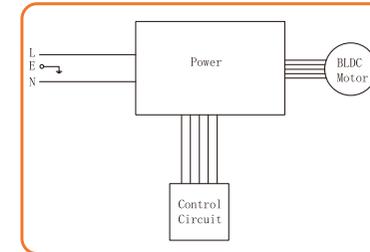

Operating Instructions

5. Press the **On/Off** button to switch the fan on or on or.
6. Choose a speed setting from 1-6 (1 Slowest & 6 Fastest) by pressing the **-or+ buttons**.

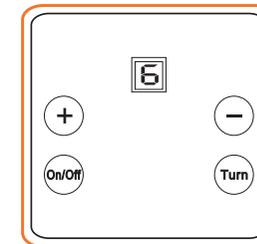

7. Press the **Turn** button for side to side oscillation.
8. Adjust the fan head for the preferred position.



Energy Efficiency - Power Consumption per Speed Setting

2. These fans are extremely energy efficient, consuming a minimum of 4 watts and a maximum of 43 watts, depending on the speed setting between 1 & 6.

1 – 4 Watts	4 – 25 watts
2 – 12 watts	5 – 35 watts
3 – 18 watts	6 – 43 watts