

# **DOMESTIC DC WALL FAN**

## **INSTALLATION AND USER MANUAL**

**Thank you for purchasing your FANCO Domestic DC Wall Fan. Please read all instructions carefully before assembly and use.**

## **1.0 SAFETY INSTRUCTIONS**

Read all instructions carefully, even if you feel you are quite familiar with this type of appliance. When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed:

1. Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons and may void the warranty. Improper installation may result in the risk of fire, electric shock, or injury to persons.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances.
5. Remove the product from packaging and check all components are in good condition before use. Do not use the fan if you find a damaged part.
6. Ensure that the fan is switched off from the supply mains before any maintenance, assembly, or disassembling parts.
7. If unusual oscillating movement is observed, immediately stop using the fan and contact the manufacturer, its service agent or suitably qualified persons.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. **This product is for indoor use only.** Do not place the fan in or near an open window, rain and other weather elements may cause an electrical hazard.
10. Do not immerse or expose the product to water, moisture or other liquids.
11. Never insert fingers or any object through the guards.
12. Make sure your hands are dry before operating the electrical appliance.
13. Do not cover the product, or use the product near curtains.
14. **Caution! Risk of electric shock:** Do not attempt to open any part of the motor housing, as a risk of electrical shock may exist.


### **IMPORTANT NOTE:**

**The important safeguards and instructions given in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which cannot be built into any product.**

## 2.0 PRODUCT SPECIFICATION


Model Number	Rated Voltage	Rated DC Motor Power	Blade Size	Weight	Controller
PWFC40DCWH	220-240 V AC	Max. 48 W DC motor	16 inches	5.9 kg	8 speeds digital controller with timer

### EXPLODED VIEW

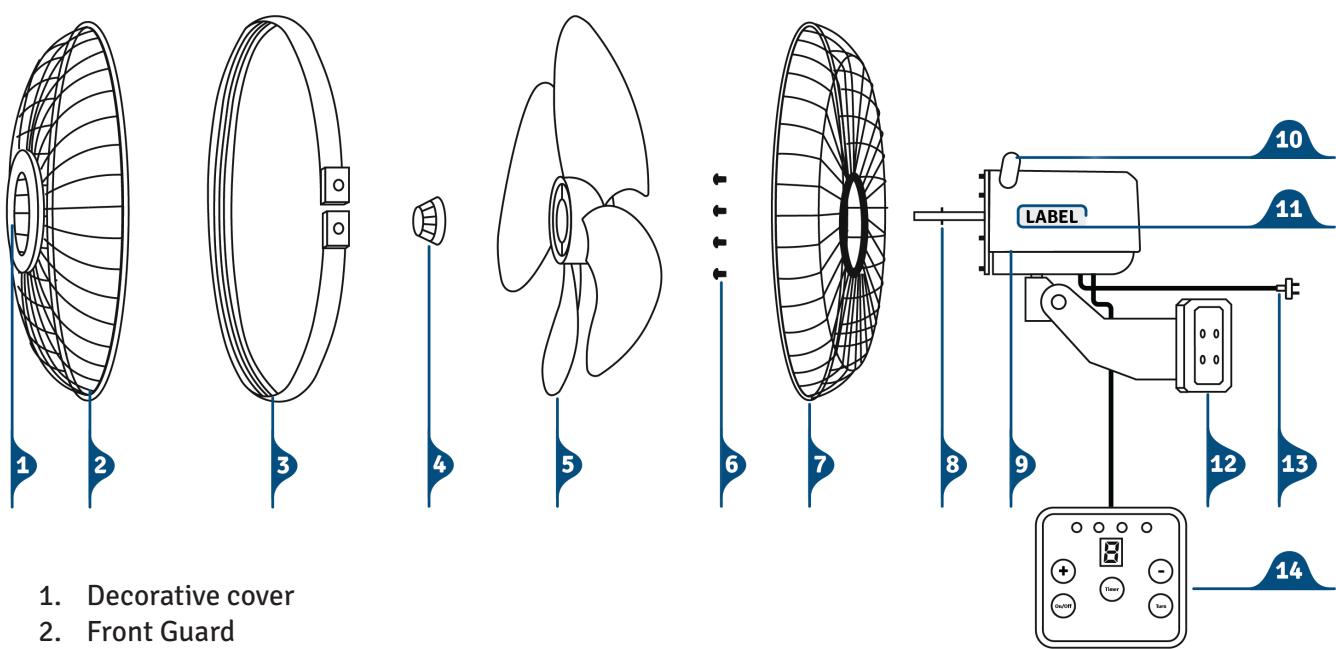


1. Decorative cover
2. Front Guard
3. Outer ring
4. Blade Locking Nut
5. Blade
6. Rear guard locking screws
7. Rear Guard
8. Motor Shaft
9. Fan head shell
10. Handle
11. Motor (Fan label)
12. Hanging bracket
13. Power cord
14. Digital control panel


### 3.0 INSTALLATION AND ASSEMBLY

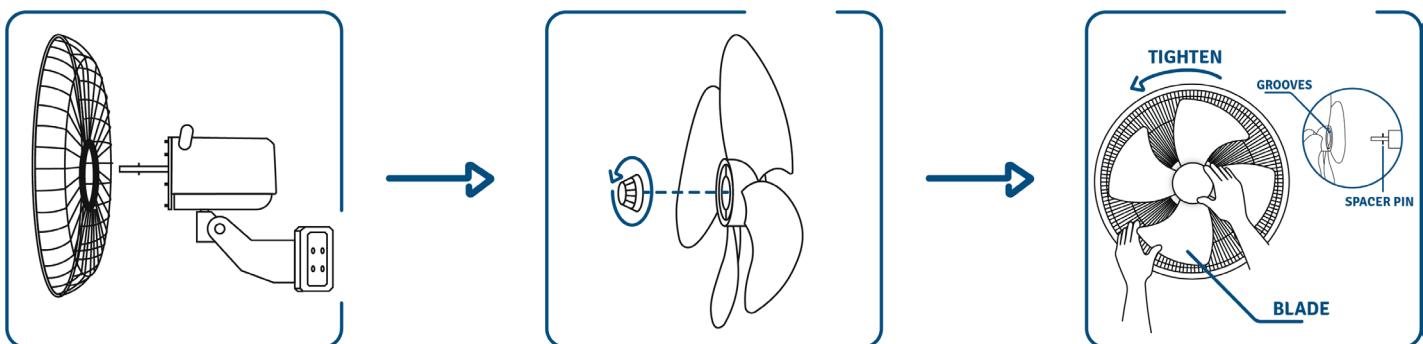

1. Loosen the Rear guard locking screws (6) from the Motor (11), Place the Rear Guard (7) over the Motor shaft (8). Fit holes in the Rear guard (7) over the four screw holes on the Motor (11). Secure the Rear guard (7) by screwing the four Rear guard locking screws (6).
2. Place the Blade (5) onto the Motor Shaft (8) and fasten it by tightening the Blade Locking Nut (4).

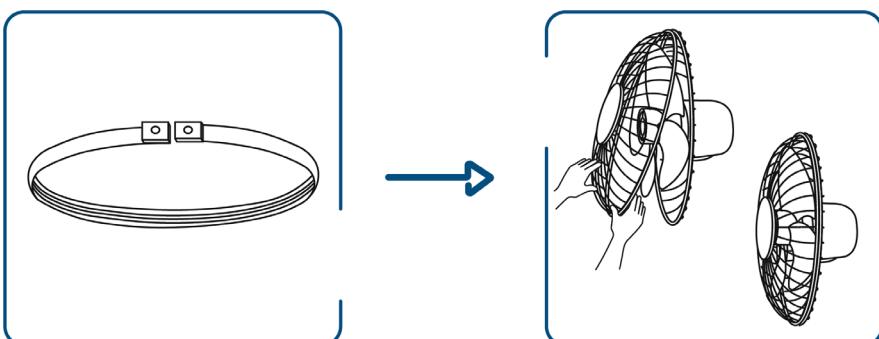


3. Place the Outer ring (3) along the rim of the Rear guard (7), but DON'T tighten or lock the screw on the Outer ring (3) yet.
4. Slide the Front Guard (2) into the Outer ring (3) and align with the Rear Guard (7). Fasten the guards together by locking the screw on the Outer ring (3).

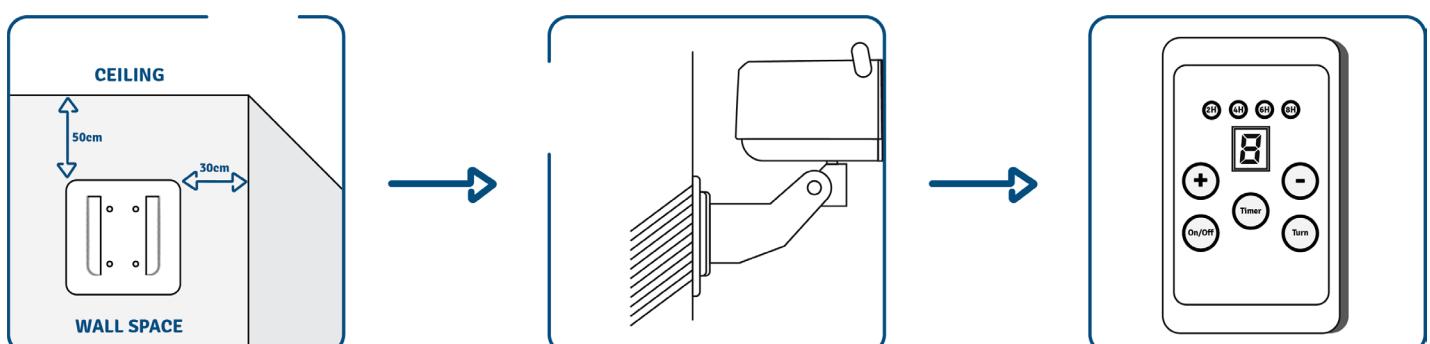


5. Mount the hanging bracket (12) on the wall with screws provided in the accessory pack.
6. Hang the Motor (11) with bracket onto the Hanging bracket (12).
7. Attach the Digital control panel (14) to the desired place.

## 4.0 OPERATING INSTRUCTIONS

1. Press the **On/Off** button to switch the fan on or off.
2. Choose a speed setting from 1-8 (1 Slowest & 8 Fastest) by pressing the - or + buttons.
3. Press the Turn button for side to side oscillation.

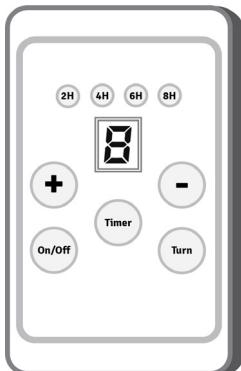

4. Adjust the Handle on the fan head to the desired angle.

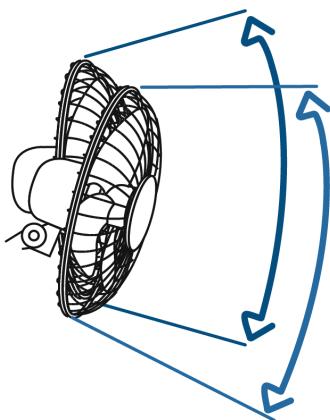

### 5. Timer

**Active timer:** When the fan is on, press the “timing” button to select a desired countdown from 2H, 4H, 6H, 8H. The LED indicator will light up behind the selected countdown mode.

**Cancel timer:** Press the “timing” button to scroll through the countdown options until no options are selected.

**\*Energy save (sleep mode) of digital display:** Once the timer mode is turned on, the digital display will turn off automatically after 30 seconds. By pressing the “timing” button for 3 seconds, you can keep the digital speed display consistently visible during timing mode.

## 5.0 MAINTENANCE INSTRUCTIONS

1. Periodic cleaning of your fan is the only maintenance required (approximately every 6 months).
2. **WARNING!** Ensure that the fan is switched off from the power source before removing the guard.
3. Remove the guards and the blade, and be careful to not drop the blade!
4. Use a soft cloth with mild soap to clean off any dust or stains, then wipe with a dry cloth.
5. Never use polish or corrosive liquids as this will damage the paint, metal or plastic!
6. Put the blade back and lock the guard securely before use.
7. Reconnect the power cord.



## 6.0 Warranty

The benefits conferred by this express Fanco warranty are optional and are in addition to all relevant implied warranties, rights and remedies available under Australian Consumer Law.

If you encounter issues with the fan during installation, Fanco highly recommends to contact Fanco for trouble shooting assistance if the installation is during business hours on 03 8658 9588 or to service@fanco.com.au.

### **Warranty details:**

Manufacturer's warranty covers a full replacement for the defect product only.  
It does not cover defects within the fan installation or improper maintenance.

### **Warranty Period:**

The warranty period for this product is 12 months.

The warranty period begins from the date of purchase, as determined by the tax invoice provided by the authorised retailer.

### **Warranty Limitations and Conditions:**

**Proof of Purchase** – Proof of purchase from an authorised retailer specifying the fan model and purchase date (such as a tax invoice) must be supplied for the warranty claim to be processed.

**Outdoor use** – This product is not intended or recommended for, and is therefore not warranted for use outdoors including covered and/or enclosed al fresco areas. The warranty does not cover rust or damage caused by rust to the motor and fan components.

**Reasonable wear and tear** – is not covered by warranty. The client should ensure the fan is regularly cleaned and any screws and blade nuts that become loose through normal operation are tightened. This is not covered by warranty.

**Domestic/Personal Use only** – This product is not designed or intended for industrial or commercial use and therefore the warranty will not cover such use.

**Purchase from Authorised Retailer** – In order for the warranty to apply, the Fanco fan must have been purchased in Australia from an authorised retailer (please see the Fanco website for a list of authorised retailers).

**Fanco Warranty Applies in Australia Only** – Fanco warranty is only available for products installed and being used in Australia.

**Incorrect Installation/Misuse/damage of product** – is not covered by warranty. The Fanco fan must be installed and used according to the installation manual and user guidelines. Damage caused by external factors such as (but not limited to) power supply faults/surges, water damage, lighting and other Acts of God is not covered by this warranty. Fanco fans must only be installed and used with compatible accessories as specified by Fanco. Use with or wiring with non-authorised accessories and/or other items will void this warranty. If a Fanco Service Agent determines a problem with the product is due to incorrect installation or misuse of the product, the product will not be replaced. Fanco does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.

## **Warranty Claims**

You can claim the warranty at the place you purchased fan or to Fanco directly.

### **Replace product at place of purchase.**

Bring the defect products and proof of purchase to the place of purchase.

### **Contact Fanco directly**

Please submit any warranty claims in **writing** by one of the following methods;

1 Email to: [service@fanco.com.au](mailto:service@fanco.com.au) and attaching the required documents

2. Filling out the warranty claim form on the Fanco website and attaching the required documents

Please ensure all warranty claims are in accordance with the warranty conditions and limitations outlined above and that you include proof of purchase

Please allow up to four days from receipt of your warranty claim for a response.

**Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss of damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

### **Fanco**

18 Cleeland Road

Oakleigh South, VIC 3167

<https://www.fanco.com.au/>

Tel: 03 8658 9588

Email: [service@fanco.com.au](mailto:service@fanco.com.au)